

How to use the hardwired zones

Thanks for using this product, this model can support both wireless and hardwired zone connection. To simplify the installation process, we herein provide the hardwired zone usage/programming guide.

Warning: In factory setting, all the hardwired zones are disabled. Before use the hardwired zones, you need to enable them through panel operation.

Hardwired zone numbers are 31, 32, 33, 34


① Navigate to [Zone Attribute] then press "Delete" button to clear zone number, input the zone number which you need to use. For example: 31



② Enable the hardwired zone



③ Connect the hardwired sensor to alarm panel

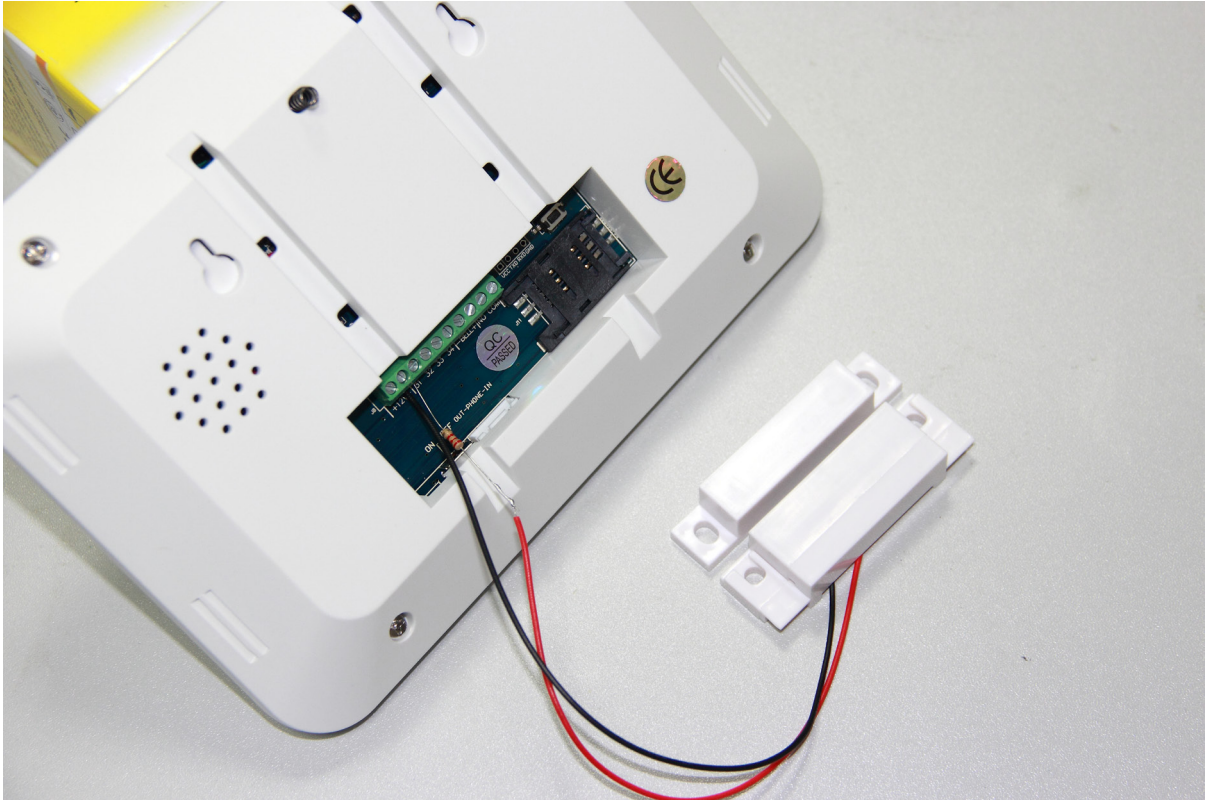

Warning: You need to use - & 31 -34 for this connection. For each of hardwired sensors, EOL resistor should be connected into circuit.

Do not use COM and NO for hardwired zone connection, COM & NO is relay output.

Tips: For avoid hassles, only enable the zone which you need to use. If you don't use hardwired zone, you need to disable it.

Reference:

<http://www.hkvstar.com/technology-news/simple-tips-on-wireless-zone-and-hardwired-zone.html>

<http://www.hkvstar.com/technology-news/connect-wired-ir-beam-to-gsm-alarm-system.html>

<http://www.hkvstar.com/product-news/install-and-test-gsm-alarm-systems-tutorial.html>